

FLEX Essential



FSIL.1048.R020.6012

FSIL.1048.G020.6012

FSIL.1048.B020.6012

FSIL.1048.Y020.6012

TECHNICAL DETAILS

4.8
12
/
60
5
-


LUMENS PER METER

ССТ		
R620-625nm	175lm	
G520-530nm	450lm	
B450-470nm	87lm	
<mark></mark> Y587-595nm	116lm	
• 1	/	

* The given data are typical values. Due to tolerances of the production process and the electrical components, values for light output and electrical power can vary up to 10%.




DIMENSION

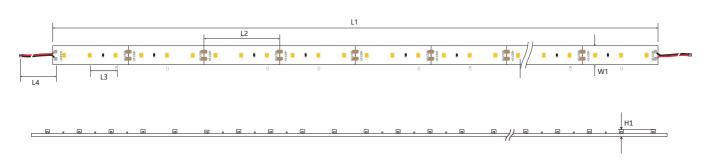

Tolerance

L1(mm)	5010	±10
L2(mm)	50	±1
L3(mm)	16.7	
L4(mm)	350	±0.2 ±5
W1(mm)	8	
H1(mm)	1.4	±0.1
		±0.1

LIGHT DISTRIBUTION

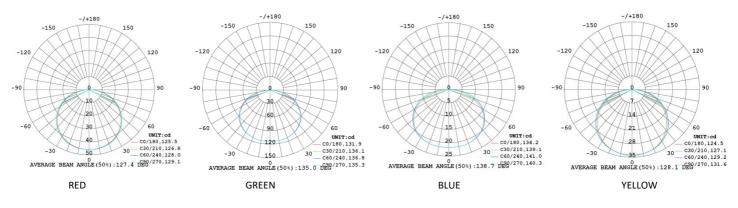

WORKING CONDITIONS

Working Temperature (°C)	-25 - 50	
Storage Temperature(°C)	-30 - 80	
Voltage Range(V dc)	23 -25	
Reverse Voltage(V dc)	25	

* Exceeding maximum ratings for operating and storage temperature will reduce expected life time or destroy the LED Modules.

* Exceeding maximum ratings for operating voltage will cause hazardous overload and will likely destroy the LED Modules.

SAFETY WARNING

- Install in accordance with nation I standards and local electrical codes.
- This product must be installed and maintained by a qualified electrician.
- Only install it with Class 2 DC constant voltage driver , Do not use this product if it does not comply with Class 2 standard.
- The power of drive must meet the output of the rated power, and do not exceed the specified output power.
- Use a cable with rated temperature at least 80 ° C and be certified for external connection of the electrical equipment.
- Improper electrical installation may cause the cable to overheat and cause a fire. Please use a suitable cable between the driver, the lamp, and the controller. When selecting a wire, the volt ge and current must meet the rated values.
- The LED module itself and all its components must not be mechanically stressed.
- Assembly must not damage or destroy conduc ng paths on the circuit board.
- To avoid mechanical damage, the LED modules should be attached secur ly to the intended substrate. Heavy vibration should
- be avoided. Installation of LED modules (with power supplies) needs to be made with regard to all applicable electrical and safety standards. Only qualified personnel should be allowed to perform installation.
- Observe correct polarity! Incorrect polarity will lead to no light emission and may cause damage of the LED module..
- Parallel connection is highly recommended as safe electrical operation mode. Serial connection is not recommended.
 Unbalanced voltage drop can cause hazardous overload and damage the LED module.
- When moun ng on metallic or otherwise conduc ve surfaces, there needs to be a electrical isolation at soldering points between module and the moun ng surface.
- Pay attentio to ESD steps when moun ng the module.
- Please ensure that the power supply is of adequate power to operate the total load.
- Damage by corrosion will not be honored as a materials defect claim. It is the user's responsibility to provide suitable protection against corrosive agents such as moisture and condensation and other harmful elements.
- For application involving exposure to humidity and dust the module must be protected by a fixture or housing with a suitable protection class.

PACKING

End cap with hole(pc)	485x380x260	
End cap without hole(pc)	360x240x240	
Bracket(pc)	/	
End cap glue(pc)	/	
Glue tip mout (pc)	/	
Screw(pc)	25	

